



OPERATING INSTRUCTION MANUAL

BFN-701⁺NET (DC TYPE IONIZER)

PRODUCT INTRODUCTION

Air ionizers are widely used by manufacturing industries today. The air ionizers' concept is to add very nearly equal numbers of positive and negative ions to the air enable to increase the electrical conductivity of the air. It neutralized the static charge on insulated and isolated objects by producing a balanced source of positively and negatively charged ions.

BFN-701⁺NET DESKTOP DC Ionizing Blower have outstanding Ion-eliminating performance; it is your ideal device to prevent static pollution and damage in the ESD area for electronic production lines and maintenance platforms.




Notes:

Please read the user guide carefully before operation. All BFN static eliminate series cannot be used under flammable and explosive environment. Don't use temporary common socket as power, all BFN ionizing blower series must be used with the power socket which has a standard power cable, and do not use the socket that has no grounding.

SPECIFICATION

Power Supply	AC110 (±15%)/60Hz AC220 (±15%)/50Hz	Working Condition	Temperature: 0°C – 50°C Humidity: 20% – 85%
Working Current	0.05A (Max Fan Speed)	Working Distance	300mm – 900mm
Dimension (mm)	W175 x H220 x D75	Decay Time	≤ 2.0 sec @ 300mm
Material	Aluminium Plates	Ion Balance	≤ ± 5V
Weight	1.5kg	Air Output	100 CFM

STRUCTURE

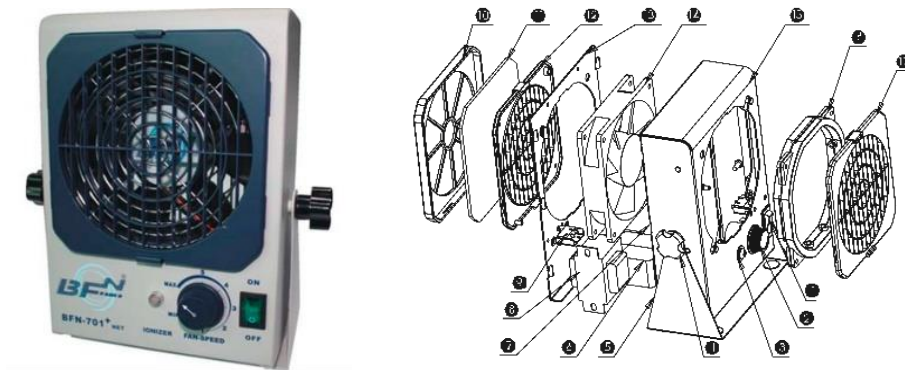

No	Description	No	Description	No	Description	No	Description
1	Power Switch	6	High Voltage Bag	11	Dust Proof Net	16	Ion Rack
2	Air Speed Controller	7	Control Board	12	Back Cover Plastic Panel	17	Front Cover Plastic Panel
3	Ion Lamp (LED)	8	Transformer	13	Back Cover		
4	Angle Knob	9	Micro-switch	14	Fan / Blower		
5	Bracket	10	Dust Proof Net Cover	15	Main Crust of Ionizer		

PACKING LIST

- BFN-701⁺ NET Desktop Ionizer
- Warranty Card
- Power Cable
- User Manual
- Calibration Certificate
- RS232-RS485 Converter (Optional)
- SALM-NSA (Optional)
- SALM-NS4 (Optional)

SAFETY

BFN-701⁺ NET is reliable and has safe circuit design, excellent grounding distribution, has a micro-switch installed at the position of detachable covers to prevent accident by automatic power cut-off when covers fall-off.

- Do not operate the ionizer in flammable and explosive environment
- Do not insert object into the air outlet
- Make sure it is grounded well before using
- Make sure power is cut-off before conducting cleaning and maintenance. Make sure the ionizer is completely dry (include the metal crust) before using after cleaned by alcohol or other preparations.
- Do not disassemble or repair the ionizer by yourself.

FEATURES

- Network function
- Automatic alarm function
The ionizer LED indicator will be green (no alarm sound), if the ionizer works properly.
LED indicator turns red (positive) or orange (negative) with audible alarm sound, if the balance voltage is higher or lower than the set value.
- Thin, light, convenient and practical
- With large ion output that can eliminate static voltage quickly
- Adjustable air speed of the fan
- Detachable front and back cover for easy and convenient cleaning and maintenance
- With safety toggle switch for security protection

INSTALLATION AND APPLICATION


Put BFN-701⁺ NET on table or fix the bracket by M6 bolts on proper plane, make sure of the effective distance is between 300mm – 900mm, make sure air covers all protection area by adjusting the angles. The air should blow to the controlled area and not directly pointed to human body.

Decay time is related to the strength of air flow provided by the ionizer, the farther the ionizer the longer the decay time. We strongly advise user to keep the BFN-701⁺ NET at a distance between 300mm to 600mm for better ionization effect.

OPERATION GUIDE

- Please set the address number first (DIP Switch) prior to usage
Each BFN-701⁺ NET ionizer needs to be settled one unique address code before connected. Address code cannot be repeated. Check below DIP switch address code for reference. Dip switch starts from the right (Low value) side to the left side (High value). UP means “0”, DOWN means “1”; 6 bits binary code can define 64 addresses (0-63). Photo below shows “000100” as binary code, thus address code is “04”.
- No need to set address code if ionizer will not be connected to online system (RTS2000).

DIP Switch Binary Coding	Decimal Conversion	DIP Switch Binary Coding	Decimal Conversion	DIP Switch Binary Coding	Decimal Conversion	DIP Switch Binary Coding	Decimal Conversion	DIP Switch Binary Coding	Decimal Conversion	DIP Switch Binary Coding	Decimal Conversion
000000	1	000001	2	000010	3	000011	4	000100	5	000101	6
000110	7	000111	8	001000	9	001001	10	001010	11	001011	12
001100	13	001101	14	001110	15	001111	16	010000	17	010001	18
010010	19	010011	20	010100	21	010101	22	010110	23	010111	24
011000	25	011001	26	011010	27	011011	28	011100	29	011101	30
011110	31	011111	32	100000	33	100001	34	100010	35	100011	36
100100	37	100101	38	100110	39	100111	40	101000	41	101001	42
101010	43	101011	44	101100	45	101101	46	101110	47	101111	48
110000	49	110001	50	110010	51	110011	52	110100	53	110101	54
110110	55	110111	56	111000	57	111001	58	111010	59	111011	60
111100	61	111101	62	111110	63	111111	64				

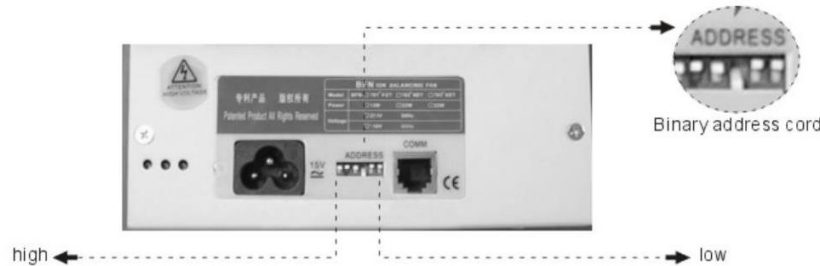


ANGLE ADJUSTMENT

Loosen the turning axis knob which locks up the bracket, then adjust to the required angle. Then finally, lock the two turning axis knobs tightly.

ONLINE SYSTEM

- Install and fixed the BFN-701⁺ NET well, check the power cable and turn on the power switch.
- When the balance voltage is under standard, the LED indicator is green.
- When the balance voltage is above or higher in positive charge, the LED indicator is red and audible alarm will be heard.
- When the balance voltage is above or higher in negative charge, the LED indicator is orange and audible alarm will be heard.
- At the beginning, the air speed is in maximum because of full pressure start. User can adjust the fan speed according to the practical situation.

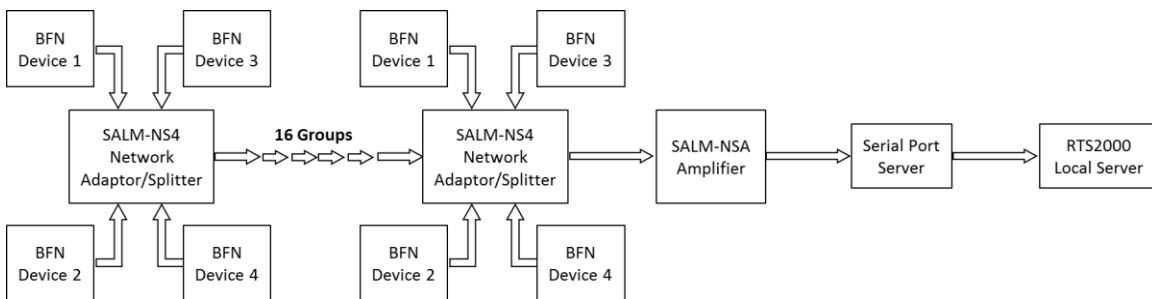

Attention: Do not insert objects into air inlet, and make sure ionizer is grounded well before using.

- For real time online monitoring system, please do read ESD.RTS software instruction and system interface for details.

REGULAR MAINTENANCE


Cleaning and checking periodically (using CPM) to make sure BFN-701⁺NET is working properly.

■ Cleaning

BFN blower series do not release dusts themselves; they can completely measure up the different requirements of cleanroom environment. But it is necessary to clean blowers to ensure it can work normally due to the particles and dust floating around which may pollute the blowers.


The unique design makes the cleaning easy and convenient for inner parts.

1. Take off the front cover

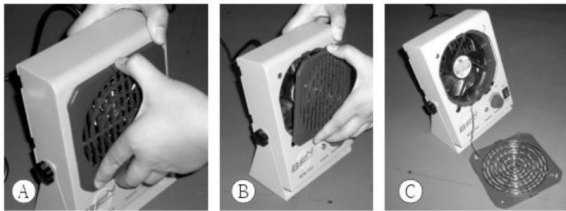

- (A) Press the button on the top front cover downwards and make the button separate from the metal crust.
- (B) Pull the front cover upwards lightly, make it separate from the metal crust completely.
- Attention:** there are orientating forelock and corresponding apertures between front cover and metal blower body, please be careful when pulling out the front cover
- (C) Make the front cover completely separate from BFN 701+NET. Attention: there is a flexible cord which connect the metal induction netting of front cover with inner BFN701+NET, please do not break it.

2. Take off the back cover

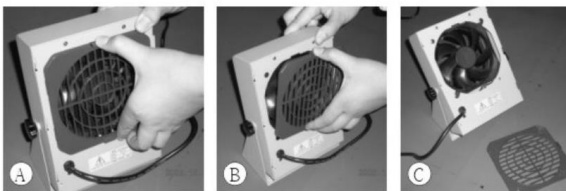

- (A) Press the button on the top back cover downwards and make the button separate from the metal crust.
- (B) Pull the back cover upwards lightly, make it separate from the metal crust completely.
- Attention:** there are orientating forelock and corresponding apertures between back cover and metal blower body, please be careful when pulling out the back cover
- (C) Make the back cover completely separate from BFN701+NET.

3. Now you can use soft brush and compressed air to clean, or use tampons/cotton swabs with 35% industrial alcohol. You can clean according to the periodic checking data or at practical situation.

! Attention: Make sure that power is cut off before cleaning and maintenance. Make sure that the ionizer is completely dry before using to avoid any damage to the product and to the user as well. Please be careful when disassembling the ionizer.

4. Install the front and back cover after cleaning.

! Attention: To avoid damage, please be careful when installing the covers. There are pressed blocks protecting safety loop under the covers which pushes the jiggle switch. The ionizer will not work properly if jiggle switch is not pressed by the block pin.

■ Ion Pin Replacement

It is quite easy to replace ion pin needle of BFN-7 blower series due to its unique insert-extract ion needle design.



- (A) Take off the front cover
- Attention:** Do not damage the induction cable)
- Extract the ion needle by sharp-tip tweezers, and insert a new one. Attention: make sure the ion needle reach the bottom of the hole. Be careful and do not hurt your hand.
- (B)
- (C) Install the front cover according to the process as following

CALIBRATION

BFN-701⁺NET have stable performance, but the parameters may change according to the affection operating temperature and humidity, and fluctuation of voltage.

Users can test ion balance or offset voltage and static decay time by portable ionizer testing device such as Charged Plate System (CPS) at the working area. Periodic checking is requested.

User is requested to calibrate the CPS equipment that used to verify the performance of the ionizer at least one time a year.

Operating manual is only for BFN-701⁺NET users. It includes the tester's components, operation and some concerning information, some upgrading property with continuing stability, slightly difference will be allowed with operation and manual.



Suppliers Information

2018 Shenzhen HORB Technology Corp. Ltd. / Printed in China